


FANMU Music Player BF01 User Manual

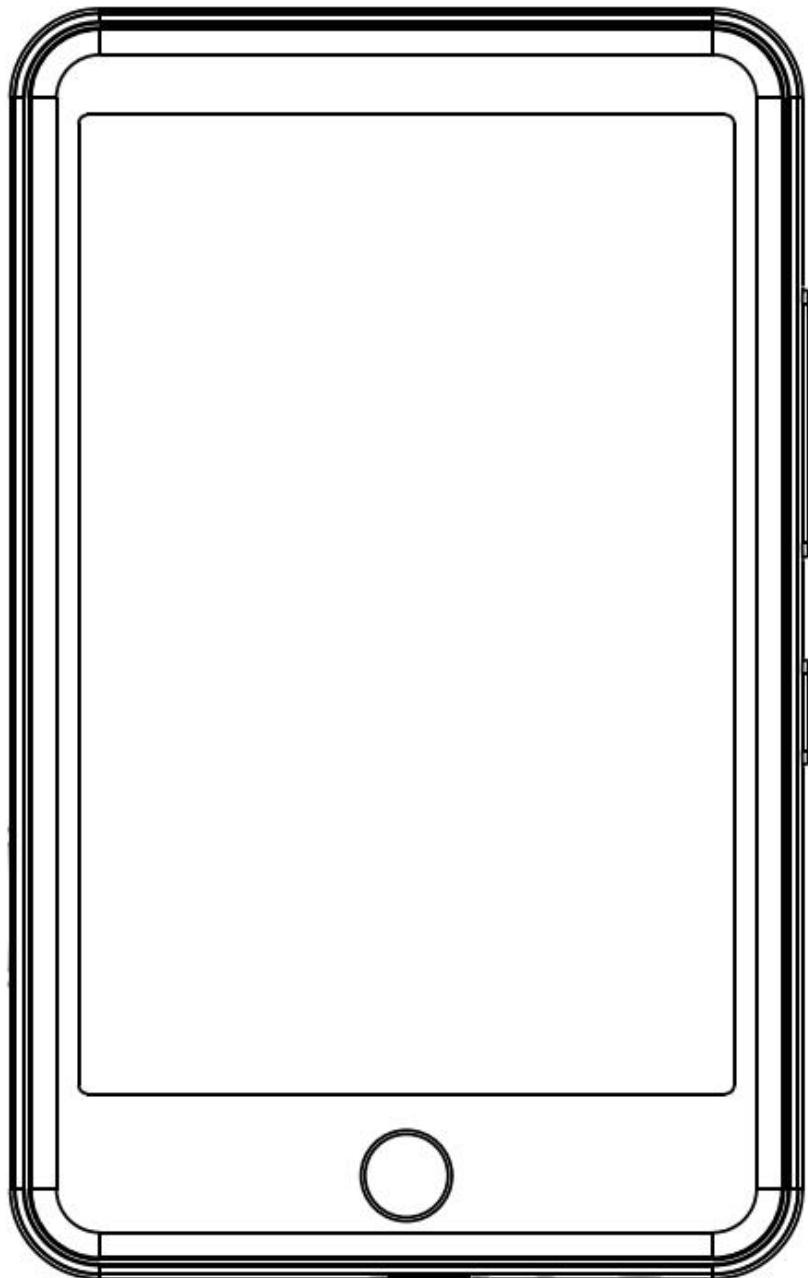

To ensure the best user experience, please read this manual carefully. Keep it for future reference.

Preface

1. Thank you for purchasing the FANMU Music Player BF01. Please read this user manual thoroughly before using the product. By using this product, you are deemed to have read and understood this manual.
2. This manual is based on the latest information available at the time of product release. Specifications are subject to change without prior notice due to product improvements.
3. The power interface of this product is designed for charging the built-in battery. Use a computer USB port or a 5VDC/1A power adapter compliant with national standards and CCC certification. Do not connect to other power sources, as this may cause irreparable damage such as charging failure, data loss, or hardware damage. The company assumes no liability for such issues.
4. Do not attempt to repair or disassemble the product yourself, as this will void the after-sales service. The company is not responsible for editorial errors or omissions in this manual. We reserve the right to modify product specifications without notice.
Unauthorized reproduction, distribution, or modification of this manual is prohibited.

Precautions

1. Keep the product away from electromagnetic environments, excessive moisture, dust, and other harsh conditions.
2. Do not immerse the device in water. Clean it with a soft, dry cloth; avoid corrosive or abrasive cleaners.
3. Do not apply excessive pressure or squeeze the product.
4. Avoid severe vibration or impact.
5. Before using headphones, lower the volume and gradually increase it to a comfortable level. Prolonged use at high volumes may damage hearing (medical advice). Stop use or reduce volume if tinnitus occurs.
6. Keep the product out of reach of children to prevent accidents and falls.
7. Full charging takes approximately 2–3 hours under normal conditions. Disconnect from the power source after charging is complete; do not leave it plugged in for extended periods.
8. Do not use headphones while driving, cycling, operating machinery, or engaging in tasks requiring awareness of ambient sounds.
9. **Battery Charging Notes:**
 - The product uses a polymer lithium battery, which is rechargeable.
 - Battery replacement must be performed by professionals. Incorrect replacement may cause a risk of explosion; use only the same or equivalent battery type. Dispose of used batteries through professional recycling channels.
 - Battery life may vary depending on usage conditions and production date.


- Do not expose the battery to extreme heat, such as direct sunlight or fire.

1. Software updates may cause discrepancies between actual usage and this manual. Refer to the purchased product for the latest information; this manual is for reference only.

Main Features

- 3.52-inch E Ink display with full-screen touch
- Supports mainstream audio formats: MP3, FLAC, AAC, WAV, APE, WMA, etc.
- Multiple playback modes: List Play, Single Cycle, All Cycle, Random Play
- Type-C transmission
- Bluetooth 5.3
- Supports Chinese-English dictionaries (idiom, Chinese, Hanzi, classical Chinese dictionaries) for search and query
- Built-in clock, calculator, alarm, and stopwatch
- E-book reader
- Radio function
- TF card expansion up to 128GB
- Multilingual support
- Built-in speaker
- Compatible with Windows 7 and above

Button Descriptions

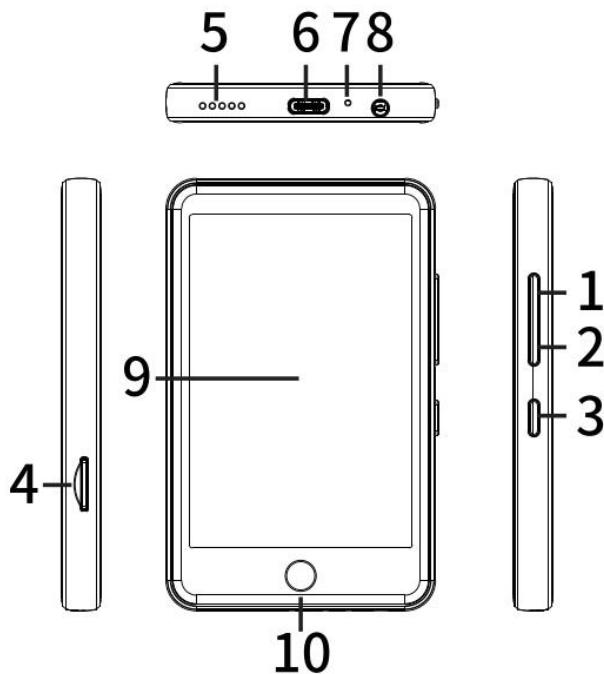

No.	Description	No.	Description	No.	Description
1	Volume Up	2	Volume Down	3	Power Button
4	TF Card Slot	5	Speaker	6	USB Interface
7	Microphone (MIC)	8	Headphone Jack	9	Display Screen
10	Home Touch Key				

Operation Instructions

Power On/Off & Screen Lock

- Power On/Off:** Long press the power button for 3 seconds to turn on/off the device. The player will automatically shut down after the user-set idle time (this function is disabled when connected to a PC or charging).
- Screen Lock/Unlock:** Short press the power button to turn the screen off/on when the device is on.

Home Key

Press to return to the main interface.

Music Playback

Transfer downloaded MP3 files from your computer to the "Music" folder on the device. Select the "Music" icon from the main menu to start playback.

Playback Mode Settings

- All Songs:** Play all songs in the "Music" folder.
 - Manually select a song to start playback.
 - Random playback (循环模式 is determined by the playback settings).
- Artists:** Categorize songs by artist name (exact matching required; additional symbols/text may be recognized as different artists).
- Albums:** Categorize songs by album name.
- Favorites:** Tap the heart icon during playback to add the song to "Favorites 1-2-3".

4. **Update Playlist:** Use this feature if songs from a new TF card or newly copied files are not found. In the playback interface, tap the three-dot icon in the upper right corner for "Delete" and "Equalizer" options.
 - **Playback Modes:** 4 modes – "All Repeat," "Random Play," "Sequential Play," "Single Repeat."
 - **Equalizer:** 8 音效 options: Off (default), Rock, Funk, Hip-hop, Jazz, Classical, Electronic.
 - **Variable Speed Play:** Tap the "X" icon in the playback interface to adjust speed (supports MP3 格式, range: -3 to +3).
 - **A-B Repeat:** Press the "A-B" key during playback to repeat a specific segment. First press marks the start (B disappears), second press marks the end (A disappears), and the segment loops.
 - **Single Delete:** Delete the currently playing song.

Recording

Select the "Recording" icon from the main menu. Tap the three-dot icon for settings:

1. **Recording Format:** Choose between MP3 and WAV.
2. **Bit Rate:** 9 options (WAV: 256kbps, 512kbps, 768kbps, 1024kbps, 1536kbps; MP3: 32kbps, 64kbps, 128kbps, 192kbps). Higher bit rates offer better quality but larger file sizes. Default: WAV 512kbps.
3. **Recording Library:** Access via the folder icon in the lower left; long-press files to delete individually or entirely.
4. **Start Recording:** Tap the central circle.
5. **Pause/Resume:** Tap the play/pause icon in the lower right during recording.
6. **Quick Settings:** Use the icons above the horizontal line to switch format and bit rate directly.

System Settings

Select "Settings" from the main menu for the following options:

1. **Language:** Choose from Simplified Chinese, Traditional Chinese, English, etc. Default: Simplified Chinese.
2. **Power-Saving Shutdown:** Auto-shutoff after user-set idle time. Disable to turn off this feature.
3. **Timed Shutdown:** Set shutdown time up to 99 minutes. Default: 00/Off.
4. **Date & Time:** Adjust time and date settings.
5. **Speaker Toggle:** Enable/disable built-in speaker.
6. **Info:** View software version, TF card storage, and available space.

7. **Format Device:** Erase all files (confirm "Yes/No" in the prompt).
8. **Factory Reset:** Restore default settings.

E-Book Reader

Transfer TXT-format e-books to the "E-Book" folder via computer. Select the "E-Book" icon for reading:

- **Auto-Page Turn:** Tap the play icon; set interval in the three-dot menu (upper right).
- **Page Jump:** Enter page number and confirm.
- **Bookmarks:** Add/delete bookmarks; long-press to manage saved positions.
- **Navigation:** Tap left/right sides of the screen to turn pages backward/forward.

Alarm Clock

- **On/Off:** Enable/disable the alarm.
- **Time Setting:** Adjust alarm time.
- **Cycle:** Set to "Single," "Daily," or "Weekdays."
- **Ringtone:** Choose built-in tones or TF card music.
- **Volume:** Adjust alarm volume.

Radio

Enter the radio interface; use the triangle icons on either side of the frequency display to tune manually (short press) or auto-scan (long press, stops at clear channels). The three-dot menu (upper right) offers settings; bottom icons include:

1. **Preset Stations:** Saved stations from auto-scan.
2. **Save Preset:** Store the current station.
3. **Auto-Tune:** Scan all available frequencies.
4. **FM Recording Folder:** Storage for recorded radio content.
5. **Start FM Recording:** Save current radio broadcast to the FM folder (separate from normal recordings).
6. **Frequency Band:** Select "ONR (General), "JP (Japan), "EU (Europe).
7. **Background Play:** Enable to continue playback when exiting the radio interface.
8. **Clear Presets:** Delete all saved stations.

Bluetooth

- **Switch:** Turn Bluetooth on/off.
- **Search Devices:** Scan for nearby Bluetooth devices.

- **Paired Devices:** View and manage paired devices.

Learning Functions

- **English Dictionary:** Includes dictionary, vocabulary book, and word learning features.
- **Chinese Dictionary:** Supports searches for Chinese words, idioms, Hanzi, and classical Chinese terms.

Charging

1. Check battery level after startup. Charge promptly if low; the device will auto-shut down when battery is critically low.
 - **Adapter Charging:** Connect the adapter to a power source, then link the USB cable to the device's Type-C port. Full charge in 2–3 hours (use a 5VDC/1A CCC-certified adapter).
 - **PC USB Charging:** Connect to a computer's USB port (slower than adapter charging). For faster charging, power off the device during PC charging.
 - **Note:** Slight heating of the charger and device during charging is normal.

Accessories List

Item	Quantity
Main Unit	1
Type-C Data Cable	1
TF Card	1
User Manual/Warranty Card	1
Product Certificate	1
Screen Protector	1

Actual accessories may vary; refer to the package contents.

Product Specifications

Parameter	Details
Product Name	Music Player
Model	BF01
Dimensions	97.7 × 61 × 9.0 mm
Software Language	Simplified Chinese, English
Weight	Approx. 88g
Display	3.52-inch, 240×360 E Ink screen
Input Method	Touch keys
Battery	850 mAh / 3.7V lithium battery
Charging Specs	5V/1A input
Charging Time	Approx. 3 hours
Bluetooth Version	5.3
Total Harmonic Distortion	<0.1%
Signal-to-Noise Ratio	90dB@1KHz, +3dB
TF Card Expansion	≤128GB (FAT32 format)
Supported Audio Formats	MP3, FLAC, AAC, WAV, APE, WMA, etc.
Recording Formats	MP3, WAV
Interface	Type-C USB 2.0
E-Book Format	TXT (≤10MB)

Speaker	1W × 8Ω
Operating Temperature	-5°C to 40°C

Audio parameters are for reference only; slight deviations may occur due to component differences.

Environmental Statement

In compliance with the Electronic Product Pollution Control Management Measures and SJ/T11363-2006 standards, the table below lists hazardous substances in components:

Component	Hazardous Substances/Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Plastic Parts	○	○	○	○	○	○
PCBA	○	○	○	○	○	○
Data Cable	○	○	○	○	○	○
Metal Shell	○	○	○	○	○	○
Display Screen	○	○	○	○	○	○
Speaker	○	○	○	○	○	○
Packaging	○	○	○	○	○	—

○: Content within SJ/T11363-2006 limits. X: Content exceeds limits in at least one homogeneous material (not applicable in this product). *Most components use*

environmentally friendly materials. Hazardous substances in certain parts are unavoidable due to global technical limitations.

Three Guarantees Service Policy

1. The service period starts from the purchase date, based on the invoice.
2. **Coverage:-** 主机: 15-day replacement, 12-month warranty.- 线材配件: 1-month replacement (accessories included with the product are not covered).
3. Faults caused by component defects under normal use will be repaired or replaced free of charge within the warranty period, subject to dealer verification.
4. Warranty services apply only within the specified period; contact the dealer promptly for issues.
5. **Exclusions:**
 - Non-genuine products.
 - Expired warranty, altered serial numbers, or missing documentation.
 - Damage from improper use, neglect of manual instructions, or unauthorized repairs.
 - Force majeure, improper transportation, or use in harsh environments (oil, high heat, dust, liquids, etc.).
1. Do not disassemble, impact, squeeze, or incinerate the product. Discontinue use if the battery swells; do not expose to high temperatures or water. Incorrect battery replacement may cause explosion; dispose of batteries properly. Use only certified power adapters.
2. The manufacturer is not liable for special, incidental, or indirect damages.
3. Discontinued products may not be repairable due to parts shortages; warranty-covered products will be replaced with equivalent items.
4. The manufacturer is not responsible for data loss, work interruptions, or profits lost due to product use or failure. Back up data before repair; no liability for indirect losses.
5. The manufacturer reserves the right to interpret these terms.
6. For repairs, send the product, packaging, completed warranty card, and purchase proof (invoice/receipt) to the designated address; shipping fees are the user's responsibility.
7. This policy applies to mainland China only.