


梵沐 Famue

# Digital Player BF07

## User Manual

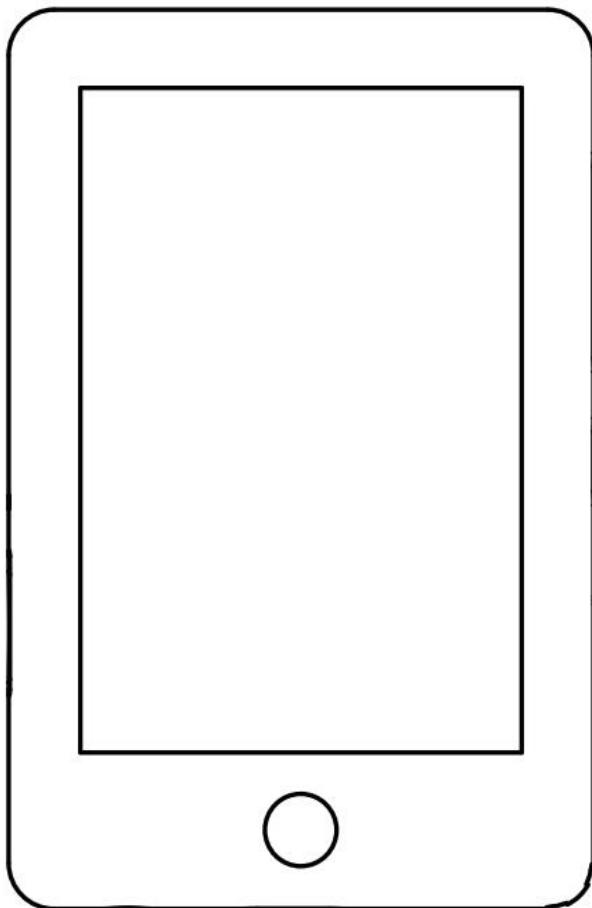

To ensure the best user experience, please carefully read this manual and keep it well for future reference.

**\*\*Preface\*\***

1. **\*\*Thank you for purchasing the Fanmu Digital Player BF07.\*\*** Please read this user manual carefully before using the product. We assume that you have thoroughly read this manual prior to commencing use.
2. **\*\*This user manual is based on the product specifications at the time of shipment.\*\*** No further notice will be given for any subsequent modifications to the product.
3. **\*\*The power interface of this product is designed exclusively for charging the built-in battery.\*\*** Use a computer USB port or a 5VDC/1A power adapter that meets national standards and has passed CCC certification (China Compulsory Certification) to charge the device. Connecting other power sources may result in charging failure, data loss, or hardware damage—consequences for which our company shall not be held responsible.
4. **\*\*Users are strictly prohibited from repairing or disassembling the product independently.\*\*** Failure to comply may void our obligation to provide standard after-sales service.
  - The company shall not be held responsible for any editing errors or omissions in this document.
  - The company reserves the right to modify product specifications at any time without prior notice due to continuous improvements.
  - No part of this user manual may be reproduced, translated, or distributed for any purpose without prior written permission from the company.

**\*\*Precautions\*\***

1. Keep the product away from electromagnetic environments and avoid excessive moisture, dust, or other adverse conditions.
2. This device must not be submerged in water. Do not use any corrosive or abrasive cleaning agents to clean the product.
3. Avoid applying excessive force when handling or squeezing the product.
4. Do not subject the product to severe vibrations or impacts.
5. Before using headphones, reduce the device's volume first and gradually increase it to a comfortable level during playback. To protect your hearing, avoid prolonged use at high volumes (doctors warn that extended exposure to loud sounds can damage hearing). If tinnitus occurs, lower the volume or stop using the device immediately.
6. Ensure the product is placed securely to prevent accidental contact by children, which could lead to injuries or drops.
7. Under normal conditions, the device takes approximately 2–3 hours to fully charge. After charging is complete, remove the USB cable promptly—do not

leave the device connected to power for extended periods.

8. **Do not use headphones while driving, cycling, operating machinery, or performing tasks requiring attention to ambient sounds.**

### 9. Battery Charging Guidelines

(1) The device uses a lithium polymer battery, which supports repeated recharging.

(2) **Lithium polymer battery replacement must be performed by authorized professionals only. Users must not attempt to replace the battery themselves** (improper handling may cause explosions; replacements must use batteries of the same or equivalent type). For environmental protection, discarded batteries should be handed over to professional recycling facilities.

(3) Battery lifespan may vary depending on usage conditions and production date.


(4) Batteries must not be exposed to direct sunlight, fire, or overheated environments.

10. Software updates may cause discrepancies between actual product functionality and this manual. Please refer to the purchased product as the final standard—the user manual is for reference only.

### **Key Features**

- **2.7-inch e-ink display**;
- **Full-screen touch control**;
- **Supports mainstream audio formats**: MP3, FLAC, AAC, WAV, APE, WMA;
- **Multiple playback modes**: List playback, single-track loop, all-loop playback, random playback;
- **Type-C connectivity**;
- **Bluetooth 5.4 support**;
- **Dictionary functionalities**: Idioms, Chinese vocabulary, Chinese characters, and classical Chinese dictionary searches;
- **Integrated utilities**: Clock, calculator, alarm clock, countdown timer;
- **E-book reader**;
- **TF card expansion up to 128GB**;
- **Multi-language support**;
- **External playback support**;
- **Compatible with Windows 7 and later systems**;
- **File search functionality**;
- **Bluetooth file transfer support**;
- **File copy functionality**.

### Button Description

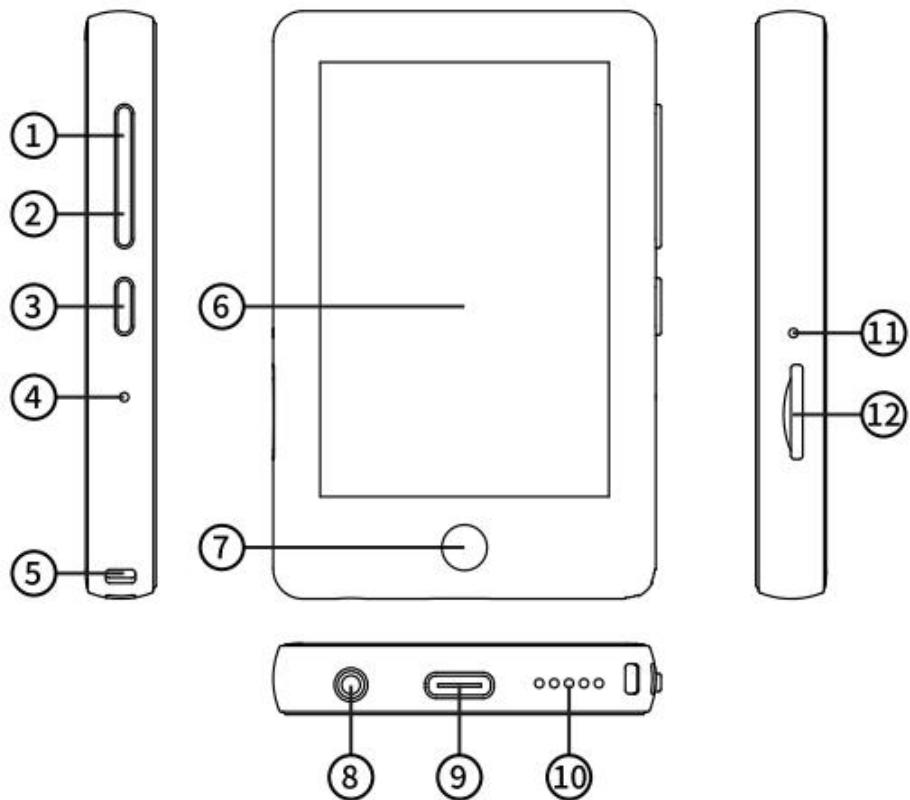

NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	NUMBER	DESCRIPTION	↓
1	Volume Up	4	MIC	7	Home Key	
2	Volume Down	5	Lanyard Hole	8	Headphone Jack	
3	Power Button	6	Display Screen	9	USB Port	
10	Speaker	11	Reset Button	12	TF Card Slot	

## \*\*Operation Instructions\*\*

---

### \*\*Power Button\*\*

1. **\*\*Turn on\*\*:** Press and hold the power button for 3 seconds.  
**\*\*Turn off\*\*:** Press and hold the power button for 3 seconds again.  
**\*Note:** This function is disabled when the player is connected to a PC or charging.\*
2. **\*\*Screen Lock/Unlock\*\*:** Short press the power button while the device is on to lock or wake the screen.

---

### \*\*Home Button\*\*

1. **Return to Main Menu**: Short press the Home button from any interface to return to the main menu.
2. **Night Light Function**: Long press the Home button to toggle the night light on/off.

---

#### **Volume Keys**

1. **Adjust Volume**:
  - Short press to increase/decrease volume by one level.
  - Long press to rapidly adjust volume.

---

#### **Music Playback**

**Access Music Menu**: Tap the music icon on the home screen to access the following options:

- Currently Playing
- All Songs
- Artist
- Album
- Genre
- Favorites
- Update Playlist

---

#### **Music Playback Interface**

1. **Now Playing**: Tap to enter the current playback interface or switch to the previous playback screen.
2. **Search All Songs**: Insert an external storage card to display the internal disk and card directory. Tap the search icon in the top-right corner and enter keywords to search songs by title.
3. **Artist Classification**: Sort songs by artist name.
4. **Album Classification**: Sort songs by album name.
5. **Genre Classification**: Sort songs by genre.
6. **Add to Favorites**: Tap the heart-shaped icon during playback to save the current song to **Favorites 1-3**.
7. **Update Playlist**: Refresh the playlist from the disk.
8. **Playback Controls**:
  - (1) **Variable Speed Playback**: Tap the "X" icon to adjust playback speed (-3 to +3).
  - (2) **Add to Favorites**: Tap the heart-shaped icon to add the current song to **Favorites 1-3**.
  - (3) **Playback Modes**: Toggle between **All Repeat**, **Random Play**, **Single Repeat**, and **Orderly Play**.
  - (4) **A-B Repeat**:

1. Tap the "A-B" icon to set the start point (letter A appears).
2. Tap again to set the end point (letter B appears).
3. The system will loop the segment between A and B. Tap "B" again to exit repeat mode.

(5) **Track Navigation\*\*:**

- Short press the up/down arrows to switch tracks.
- Long press to fast rewind/forward.
- Drag the progress bar to jump to specific time points.

(6) **Play/Pause\*\*:** Tap the play icon to pause or resume playback.

(7) **Delete\*\*:** Tap the menu icon in the top-right corner and select "Delete" to remove the currently playing song file.

(8) **Equalizer\*\*:** Tap the menu icon in the top-right corner to access the equalizer menu with 7 sound effect options: Off, Rock, Pop, Hip-Hop, Jazz, Classical, and Electronic.

---

**\*\*Dictionary & Learning Features\*\***

**\*\*1. English Dictionary\*\***

- **Word Search\*\*:** Enter a word to view its definition. Tap the top-right corner to add it to the vocabulary book.
- **Vocabulary Book\*\*:** View added words.
- **Word Learning\*\*:** Learn words added to the vocabulary book.

**\*\*2. Chinese Dictionary\*\***

- **Character/Phrase/Idiom Search\*\*:** Enter Chinese characters, words, or idioms to view their meanings.

---

**\*\*E-Book Function\*\***

1. **Access E-Books\*\*:** Tap the e-book icon to display all e-books on the disk (select the card directory first if an external storage card is inserted).
2. **Search E-Books\*\*:** Tap the search icon in the top-right corner and enter keywords to quickly locate e-books.

**\*\*E-Book Settings\*\*:**

- **Page Number Selection\*\*:** Input a page number to jump directly to the selected page.
- **Add Bookmark\*\*:** Mark the current page as a bookmark.
- **Delete Bookmark\*\*:** Long-press a bookmark to delete it.
- **Chapter Selection\*\*:** Choose a chapter to read.
- **Delete File\*\*:** Remove the current e-book file.
- **Auto-Flip Speed\*\*:** Adjust the speed of automatic page flipping.
- **Font Size\*\*:** Select from 5 options: Small SimSun, Large SimSun, Small FangSong, Small YouYuan, and Large YouYuan.

- **Voice Playback**: Choose male or female voice for audio reading.

---

#### **Settings**

**Access Settings Menu**: Tap the settings icon to navigate through the following options:

1. **Language**: Set the interface language (default: Simplified Chinese).
2. **Power-Off Settings**:
  - **Auto Power-Off**: The device will shut down automatically if idle for 10 minutes (default).
  - **Timer Power-Off**: Set a timer (max. 99 minutes) for automatic shutdown.
3. **Date & Time**: Adjust time and date settings directly from the main interface.
4. **External Speaker**: Toggle the speaker on/off.
5. **Device Information**: View storage details (internal memory and TF card).
6. **Format Device**: Format internal memory or the TF card to delete all files.
7. **Factory Reset**: Restore factory default settings.

---

#### **Bluetooth**

**Access Bluetooth Menu**: Tap the Bluetooth icon to manage the following options:

- \*\*1. Bluetooth Switch Control\*\*: Turn Bluetooth on or off.
- \*\*2. Search Devices\*\*: Search for nearby Bluetooth devices.
- \*\*3. Paired Devices\*\*: View paired Bluetooth devices.
- \*\*4. Bluetooth File Transfer\*\*:
  - Open the **File Transfer** menu to display this device's Bluetooth name.
  - Click "Connect Host" to search for devices (connection requires the same or similar product type).
  - After successful connection, navigate to the file folder to select and transfer files.

#### **Applications**

Tap the **Application Icon** to access the following menus:

- File Browser
- Radio
- Calendar
- Calculator
- Countdown Timer
- Pomodoro Timer

---

## \*\*File Browser\*\*

1. **Display Files**: Shows all files on the internal disk (select between **Internal Disk Directory** and **TF Card Directory** after inserting an external storage card).
2. **Search Function**: Tap the search icon in the top-right corner of the file list interface and enter keywords to quickly locate files by name.
3. **File Operations**:
  - **Short Press**: Open the selected file.
  - **Long Press**: Access the context menu with options:
    - **Copy to Card**: Copy the current file to the TF card (enter the **TF Card Directory** to copy files to local storage).
    - **Send File**: Transfer files via Bluetooth or other methods.
    - **Delete**: Remove the selected file.

**1. Copy to Card**: Copy the current file to the TF card (enter the TF card directory to copy files to local storage).

**2. File Send**: After successfully connecting via Bluetooth file transfer, send the current file to the connected device.

**3. Delete**: Delete the current file.

## \*\*2. Radio Interface\*\*:

- Short press the triangular icons on the left and right sides of the **digital frequency band** to adjust channels.
- Long press to automatically search for and stop at clear stations.
- Tap the three-dot icon in the top-right corner to enter **recording/receiving settings**, with six bottom icons:
  - **Preset Radio Stations**: Automatically saved after searching for stations.
  - **Save to Preset Radio Stations**: Save the current station to preset radio stations.
  - **Auto-Tuning**: Click to automatically search for stations.
  - **FM Recording Folder**: Save FM recording files.
  - **Radio Frequency Bands**: Options include "Standard Radio ONR," "Japan Band JP," and "Europe Band EU."
  - **Background Playback Switch**: Enable or disable background playback when exiting the radio interface.
- **Clear Presets**: Delete stations from preset radio stations.

---

## \*\*3. Recording\*\*:

Enter the recording interface, click the three-dot icon in the top-right corner to access the **recording settings menu**, which includes:

- **Recording Library**
- **Storage**
- **Recording File Format**

- **Recording Bitrate**:

- (1) . Recording Library

- Short press a recording file to play it.

- Long press a recording file to display deletion options: **Delete** or **Delete All**.

- (2) . Storage

- Choose to save recordings to **internal storage** or **external storage** (TF card).

- (3) . File Format

- Two options: **MP3** or **WAV**.

- (4) . Recording Bitrate

- **MP3**: 4 bitrate options: 32 kbps, 64 kbps, 128 kbps, 192 kbps.

- **WAV**: 5 bitrate options: 256 kbps, 512 kbps, 768 kbps, 1024 kbps, 1536 kbps.

- Higher bitrates yield better audio quality but require more storage space. Default setting: **WAV 512 kbps**.

- (5) . Recording Controls

- **Start/Stop Recording**: Click the circular icon in the center.

- **Pause/Resume Recording**: Click the play/pause icon in the bottom-right corner.

- 4. Calendar**:

- Enter the calendar interface to view system date information. Swipe up/down to switch months.

---

- 5. Alarm Clock**:

- Access the alarm clock menu, which includes:

- **Alarm On/Off**: Toggle the alarm on or off.

- **Set Alarm Time**: Configure the alarm time.

- **Alarm Cycle**: Set the alarm frequency (Single, Daily, Weekdays).

- **Alarm Tone**: Choose from built-in ringtones, internal music, or TF card music.

- **Alarm Volume**: Adjust the volume of the alarm when it triggers.

---

- 6. Calculator**:

- Perform basic arithmetic operations (addition, subtraction, multiplication, division).

---

## 7. Countdown Timer\*\*:

Customize the countdown time as desired.

---

## 8. Pomodoro Timer\*\*:

- **Preset Durations\*\*:** 15 minutes, 25 minutes, 50 minutes, 1 hour 30 minutes, 2 hours 30 minutes.
- **Custom Duration\*\*:** Set a personalized countdown time.

## \*\*Charging:\*\*

1. **Check Battery Level After Startup\*\*:** If the battery level is critically low, charge it immediately! The system will enter a low-battery state and automatically shut down with a warning prompt.

### 2. **Charging via Power Adapter\*\*:**

- Connect one end of the USB cable to the power adapter and plug the other end into the player's **Type-C port\*\***.
- Under normal conditions, the battery will take approximately **2–3 hours\*\*** to fully charge. Use a power adapter that meets national standards and has passed **CCC certification (5VDC/1A)\*\***.

### 3. **Charging via Computer USB\*\*:**

- Insert one end of the included USB cable into a computer's USB port and the other end into the player's **Type-C port\*\***. The player can also function as a **mobile storage device\*\*** during charging.
- **Note\*\*:** Charging time via a PC USB port may vary depending on the computer's USB current output capacity. For faster charging, we recommend powering off the device while connected to a PC USB port.

## \*\*Important Notes\*\*:

- Slight warming of the charger and player during charging is normal.
- Avoid using non-certified or incompatible chargers to prevent damage to the device.

## Accessories List

ITEM	QUANTITY	↓
Product Main Unit	1 unit	
Type-C Data Cable	1 piece	
User Manual/Warranty Card/Product Certification	1 copy	

*The included accessories are subject to the actual contents in the packaging.*

## Product Specifications

PARAMETER	SPECIFICATION
Product Name	Digital Player
Model	BF07
Dimensions	51.2 x 78.3 x 9.5 mm
Software Language	Simplified Chinese, English, and other multiple languages
Product Weight	Approx. 64.3g
Display	2.7-inch, Resolution: 176 x 264 pixels
Buttons	Button Touch Control
Battery	500mAh/3.7V Lithium Battery
Charging Specifications	5V/1A Input
Charging Time	Approx. 3 hours
Bluetooth Version	Bluetooth 5.4
Total Harmonic Distortion	≤0.1%
Signal-to-Noise Ratio	90dB @ 1KHz ±3dB
TF Card Expansion	≤128GB (FAT32 Format)
Audio Formats	MP3, FLAC, AAC, WAV, APE, WMA, etc.
Recording Formats	MP3, WAV
Interface	Type-C USB 2.0
E-book Format	TXT
Speaker	1W x 8Ω
Operating Temperature	-5°C to 40°C