

OBOOK5 User Guide


Hangzhou Guowen Technology CO.,Ltd.

Thank you for choosing OBOOK. We wish to bring you a refreshing reading experience with our product. For better use of our product, here we prepared an operation manual for you. The manual includes basic operation instruction, specification, and frequently asked questions. Please keep the manual properly.

If you have further questions, please refer to our official website: <http://www.obook.com.cn>, or contact us through email: obook@obook.com.cn.

Thank you for your support!

Function Keys&Ports

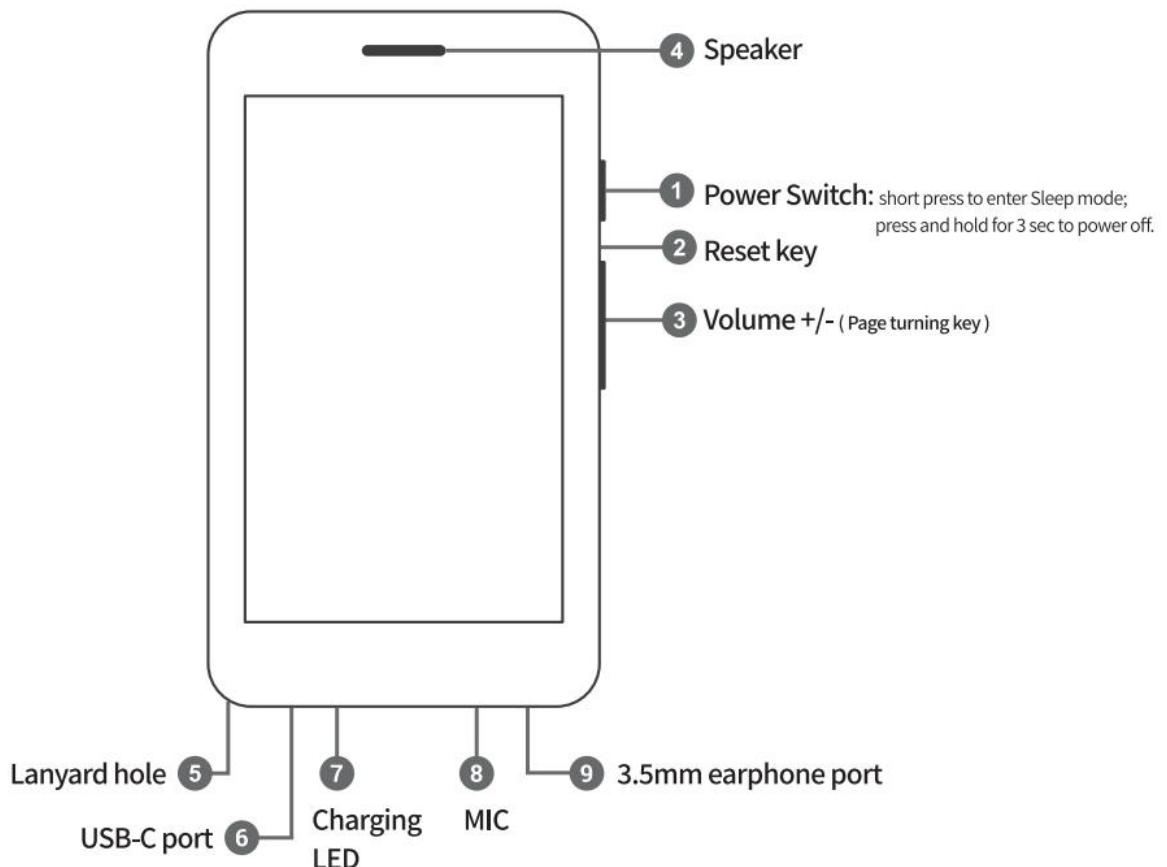

Function Keys Instruction

①Power Switch: Press and hold the **①Power Switch** for 3 seconds to start the reader. When the system initialized, short-press the **①Power Switch** to enter **Standby Mode**; Press and hold the **①Power Switch** for 3 seconds to power off.

⑥Type-C Port: You can use the bundled USB cable to connect the reader with a computer to charge or transfer books.

Charging specification:**Voltage 5V, current 1A.**

⑦Charging LED: Red light=charging; Green light=fully charged.

If the charging LED is not on during charging, please make sure the USB cable has been plugged in properly, or switch to another USB port on your computer.

If the USB port on your computer only supports low voltage(on some old computers), the reader might not be able to charge due to insufficient power.

If the reader fail to power on, or does not respond while using, please press and hold the **①Power Switch** to force the reader to power off. Then try to power on again. If still not working, please contact our sales. We will help you solve the problem as soon as possible.

Network Settings

The reader supports wireless network, please go to **【Setting】 - 【Wi-Fi setting】** to turn on Wi-Fi.

Press **【Scan】** to search for available Wi-Fi hot-spots.


When a hot-spot has been connected, it will display on top with a check mark “**V**”;

You can also press **【Add】** to manually input SSID, password and Encryption Type to join a certain network.

Status Bar and Shortcut Menu

The status bar on top of the page shows time and battery. Press the status bar and swipe down from the top to activate shortcut menu. You can adjust **【Reading Light】** and **【Wi-Fi】** in the shortcut menu.

While reading, you can click on the center of the page to activate **【Menu】** and status bar, then swipe down from the top to activate shortcut menu.

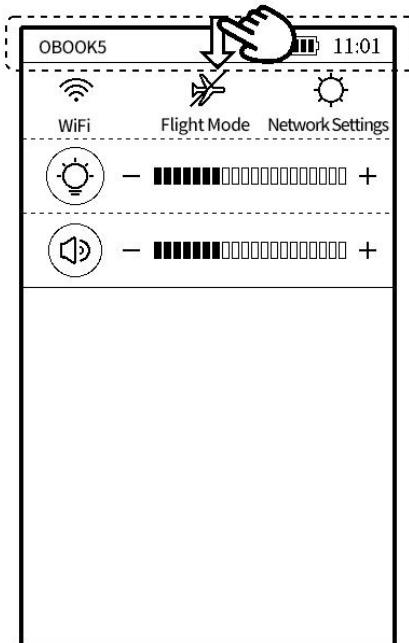

Shortcut Menu

Swipe down from the top to activate

State of Charge

The battery icon indicates the remaining battery of the reader, please charge when the battery is low.

During charging, there will be a Lightning Mark on the battery icon. And the charging LED will be on.

Notice: The power consumption will be higher than usual when the wireless signal is weak.


Reading Light

Click on the **【Reading Light】** icon  to switch on/off.
Click on the slider or “+” / “-” to adjust the brightness.

Volume

Click on the **【Volume】** icon  to switch on/off the sound.
Click on the slider or “+” / “-” to adjust the volume.

Reading Function

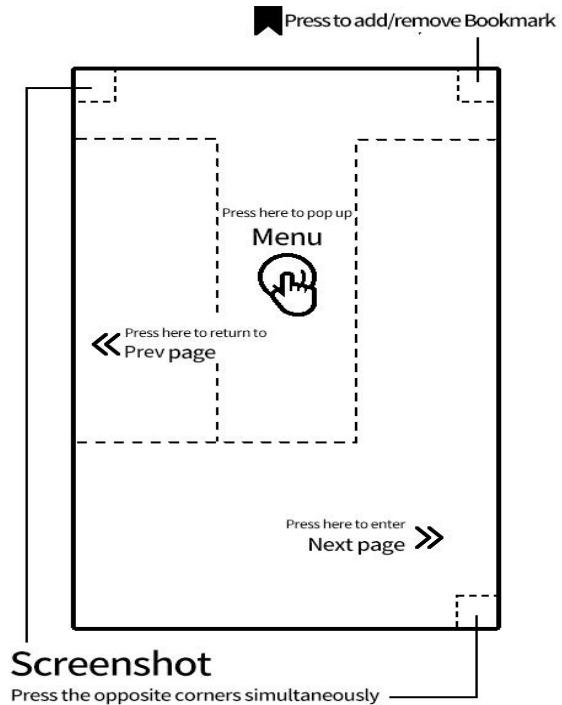

Page Turning and Menu: Press different area to turn pages and activate menu; you can also swipe left or right to turn pages;

Bookmark: While in the reading page, press the top right corner to add a bookmark, press again to undo. You can click on the center of the page, then click **【Catalogue】** (Three horizontal line at left bottom) -- **【Bookmark】**, and choose a certain bookmark in the list to jump to the designated page.

Screenshot: Press the top left corner and bottom right corner at the same time, the screen will flash once, which indicates a successful screenshot. You can click the **Folder Icon** on the homepage, then go to **【User】 - 【Screenshot】** to view all the screenshots. You can also connect the reader to a computer to view the screenshot.

Reading Progress: While in the reading page, press the right bottom corner to show and switch reading progress(percentage/page). Press the left bottom corner to show and switch chapter and book name.

Gesture scaling font: While in the reading page, expand with two fingers to enlarge the font size; shrink with two fingers to reduce the font size. You can switch off this function by click on the center of the page, then click **【More】** (Three dots icon) -- **【Gesture】**.

The Project Gutenberg eBook of Romeo and Juliet

Note | Mark | Search

use of anyone anywhere in
the United States and most
other parts of the world at
no cost and with almost no
restrictions whatsoever. You
may copy it, give it away
or re-use it under the terms

17:20

0.1%

Note and Mark: Long-press and select the text, and a dictionary dialog box will pop up. The functions shown above are: 【Note】, 【Mark】, and 【Search】. You can perform corresponding operations on the selected content. Click 【Mark】 , and the selected text paragraphs will be marked with a line. Click 【Note】 to enter the note editing page.

Search: Long-press to select the text, and a dialog box will pop up. Select "Search", and you can view a position preview of the selected text in the article. Click to jump to the corresponding position.

Reading Menu



cense included with this ebook or online at www.gutenberg.org. If you are not located in the United States, you will have to check the laws of the country where you are located before using this eBook.

fontsize —  +

fontfamily **Bold** FZFSK FZKTK More>

Format Margin And row spacing>



Return: Click the return icon to go back to the previous interface.

Reading Light: The reader supports adjustment of 20 levels of white light for reading.

Bookshelf: Click to enter the bookshelf page.

Search: Search for the content of this book.

Bookmark: Click to add/remove a bookmark.

Catalogue: Click to open the catalogue/bookmark/notes page.

Progress: Click to adjust the reading progress. You can drag the slider or click +/- to adjust to the corresponding position of the document (displayed as a percentage or by chapter). Click the thumbnail to enter the adjusted page. Click "x" to cancel and close the progress adjustment.

More: Click to view more settings, such as right-hand page turning, gesture-based font scaling, and styles.

Boschgeheimen		9:46
		
		
you are not located in the		
United States, you'll have		
to check the laws of		
the country where you are		
located before using this		
ebook.		
Title: Boschgeheimen		
Author: William J. Long		
L&R Switch	Refresh	Gesture
Style		
 Night		
		Aa
		ooo


Bookshelf

OBESTS 09:45


All books ▾   

 Local
Around the..

 Local
以色列: ...

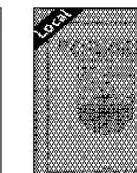 Local
Boschgehe..

 Local
Dixie Kitten

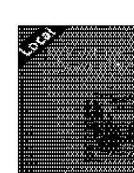 Local
The Adven..

 Local
The Adven..

1 / 2  

 Shelf

 App

All Books: Click to open the Group pop-up box. The Group includes system groups (All Books, Locally Imported books, Ungrouped books) and user-created groups. Click on the group name to view the books in the corresponding group on


the bookshelf.

File Management: Click the 【File Management】 icon to enter the file manager. You can access or delete local files.

Search: Type in book title/author to search. The search scope includes the bookshelf and the online bookstore.

More: Click to pop up a dialog box, where you can perform bookshelf management, import books, and switch between list/cover modes.

Applications

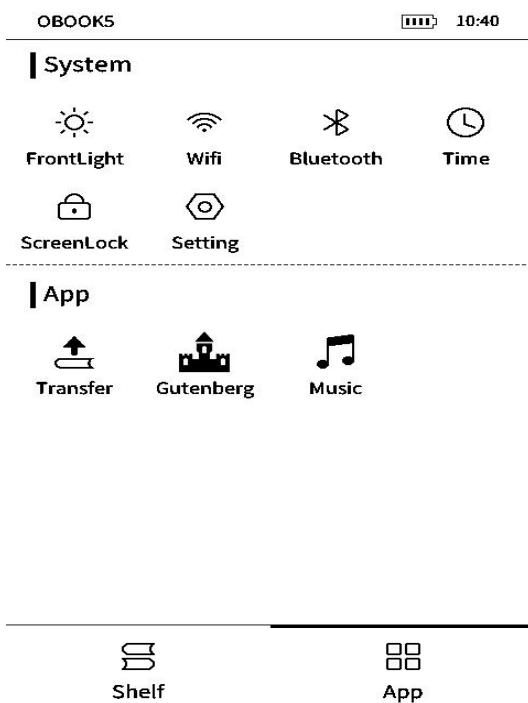

Common System Settings

Brightness Adjustment  -  + : You can slide the brightness bar to quickly adjust the brightness to the desired level, or click the +/- buttons for fine-tuning.

Wi-Fi Settings  : The reader supports wireless networks. You can click "Settings - System Settings - Network Settings" to enter the Wi-Fi settings interface, where you can search for networks, add networks, and turn on Wi-Fi. Select "Turn on Wi-Fi", and Wi-Fi will be enabled and start searching for Wi-Fi hotspots. Click on the Wi-Fi hotspot you want to connect to. Once connected successfully, the hotspot will be moved to the top and a "v" will be displayed. Click "Search for networks" to

re-search for Wi-Fi signals, and click "Add network" to manually enter the SSID, password, and encryption type to join the specified network.

More System Settings

● **Volume Adjustment**  -  + : You can slide the volume bar to quickly adjust to the desired volume, or click the +/- buttons for fine-tuning.



● **Airplane Mode** Flight Mode : This device supports airplane mode. Once airplane mode is turned on, you cannot open the network settings.

● **Time Settings**: By default, the time is synchronized online. After turning off the synchronized network time, you can also change the time manually.

● **Wallpaper**: Click to change the standby and shutdown pictures. This device supports custom wallpapers. You can see [Custom Wallpaper Method] in the upper right corner of this interface.

● **Factory Settings**: If the reader encounters abnormalities, you can also restore the reader's system to its original factory state by restoring factory settings.

[Note] The system files of the reader are stored in the flash memory of the reader, and formatting has no impact on the system. Please ensure that the battery level of the reader is no less than 30% before the operation. This operation will clear all the settings of your reader. After restoring factory settings, the reader will restart automatically, and you need to set it up again.

● **Shutdown**: Under this setting, you can perform a shutdown operation to save energy.

● **About This Product**: You can view information such as the system version, kernel version, product serial number (S/N), and MAC address of this reader. You can also check for system version updates by checking for updates.

Application Software

Book Transfer: The reader supports USB book transfer.

Connect the computer and the reader with a data cable. Click on the book transfer program, and then select "USB Book Transfer" in the pop-up interface. Click [Finish] to exit the book transfer.

Export Notes: Click to enter the note list, where you can view and export notes.

Project Gutenberg: It is a free and public welfare book application. Most of the books are free classic books.

Precautions

This product is a precision electronic product, and special attention should be paid during use:

Do not disassemble this product without permission. If you have any questions, please contact the dealer or directly contact Guowen (obook@obook.com.cn).

Keep this product away from electromagnetic environment.

Keep this product away from harsh environments such as high temperatures, low temperatures, dryness, humidity, smoke, and dust.

Do not place heavy objects on this product. Do not press the screen or buttons of this product with excessive force. Do not vibrate or impact this product violently.

Ensure that this product is placed safely to avoid accidental damage caused by children's touch.

Clean the product surface with a soft cloth, instead of water or other chemical reagents.

Do not disconnect the product when it is being formatted or during the process of uploading or downloading, otherwise, it may cause program errors.

When this product is used as a removable storage device, please store and export files according to the correct file management operation methods. Our company will not be responsible for any file loss caused by incorrect operation methods.

Our company will not be responsible for any loss of data in the memory due to product damage, repair, or other reasons.

Due to different calculation methods, the FAT partition table of the product system firmware Flash memory will occupy a certain amount of space. There will be some differences between the marked memory capacity of this product and the memory capacity shown after connecting to a PC. It depends on the firmware version and Flash type adopted by the product, which is normal.

As an electronic product, it is easy for the files and firmware programs of this product to be damaged by viruses. Please strengthen virus prevention. If the product has been infected by a virus and becomes unusable, you can format the disk on a virus-free computer or directly on this product. Then update the system through an over-the-air upgrade.

The product body will heat up if it is connected to a computer via USB for too long. It is recommended not to keep it connected to the computer for a long time. Please unplug it from the USB port when not in use.

Please operate the product according to the user manual and back up important data in a timely manner.

Due to software updates, there may be differences between the actual use of this product and the content of the instruction manual. Please refer to the purchased product. This operation guide is for reference only.

Our company reserves the right to improve products, including product specifications, designs, programs, etc. Any changes will be made without further notice!